



## Sirius AW - 415 4G PTZ Camera Quick Guide

Download the Smart life Home App or the Tuya App on Google Play Store or Apple App Store.  
Open Smart life App or Tuya App. Follow the onscreen prompts to register and log into your App. The App is free.



### Camera Installation

#### Step 1

Insert the Sim Card. Check diagram 1

#### Step 2



Insert the SD Card. Check diagram 1

#### Step 3

Power up the camera. Check diagram 1

A red Led will start to blink as the camera tries to connect to the telco network. Once successfully connected to the telco network the Led will turn blue. If the camera dose not connect the first time, power down the camera for 5 seconds and then re-power the camera to repeat.

### Sirius AW - 415 App Connection Setup

- 1 Open the Smart Life or Tuya App.
- 2 Tap Add the new device icon  and then add device.
- 3 Tap the scan QR Code Icon. 
- 4 Scan QR Code that is on the camera housing.
- 5 Wait for the configuration to finish then tap Done.

You should now have a image appear on the App

### Camera Settings

Tap the settings icon ●●● at the top right hand corner.

4G PTZ battery camera

Device information

Tap to run and automation

Basic function settings

Nightvision mode

Working mode

Detection alarm settings

Pir

Power management settings

Storage settings

Cloud storage

Offline notification

FAQ & Feedback

Share device

Add to home screen

Device updates

Remove device

IPC PC client

Naming the Camera

Cameras internal information

Single button control

Turn on/off two way talk

Turn to auto or IR mode

Power saving modes

Turn on/off Human body filtering mode

Pir settings = off - low - medium - high

Checking the camera batteries levels

SD Card formatting

Sign up for cloud storage recording services

Send offline notifications after 30 minutes

Help Manual

Share device to another phone (See below)

Move app to phones home page

Device updates

Remove camera from phone

N/A

## Sharing Your Device to another phone

From the Home page open up the device you want to share. Tap on the Settings icon. Scroll down to share device and open that page and Tap on Add Sharing now Tap on more. Tap on the Gmail icon and your email page will open, now enter the email address of the person that is sharing that device and send.

The person that is sharing the device needs install the Smart Life or Tuya App. Log on by using the senders login password. The person will now be able to receive notification and view images.

Diagram 1


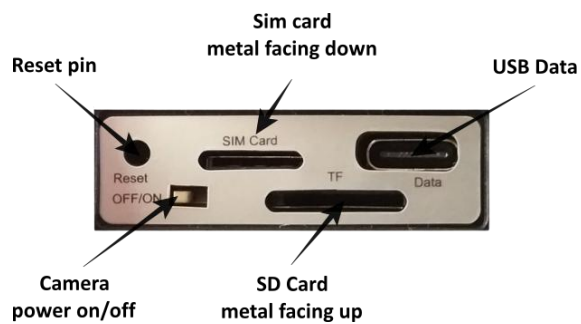


Diagram 2

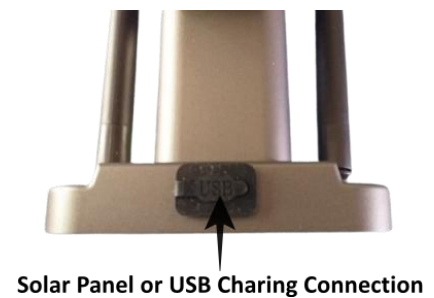

If you lose connection to the telco network, it should come back automatically but there may be circumstances that this will not apply. To establish network connection again, you may have to push the reset pen and let the camera go through finding the network sequence .